

Digital Tire Pressure Gauge, 08-0468

Jul 16, 2012

Operation:

1. Press "ON/OFF" button. LCD will display "0.0" and the current pressure unit (PSI, BAR, KG/CM², kPa).
2. Place chuck firmly onto tire valve, ensuring no air leakage.
3. Read the exact value.
4. To reduce tire pressure, press bleed valve and the new value will be displayed.
5. Press the "ON/OFF" button for 1 second to turn gauge off (gauge will turn off automatically after 3 minutes).

Important: Do not use gauge of pressures above 100 psi. Doing so may damage gauge and void warranty.

Zero Reset:

To reset zero at ambient pressure, press the "ON/OFF" button for 5 Seconds until 0.0 is displayed.

Change pressure unit:

To change unit, press and hold the "LIGHT" button (right) until pressure unit icon changes, then release the button. Repeat procedure until desired unit icon is displayed on LCD (PSI, BAR, KG/CM², kPa).

Replace Battery

NOTE: The battery needs to be replaced when the battery icon appears on the display.

1. Pull back the anti-shock cover.
2. Remove the top body setscrew with a small Phillips type screwdriver and carefully remove the battery cover.
3. Remove old battery and insert new battery (uses one 9-volt battery).
4. Reassemble battery cover to body and reinstall screw and tighten.

Specifications:

Pressure Range : 0.0 to 60.0 psi

Accuracy : 1% F.S. at 25°C (77°F)

Resolution : 0.1 psi

Battery : 9V Alkaline

Battery Service Life : 1000 tests

Auto Off : 180 sec.

Operating Temp. : -10 to 50°C (14 to 122°F)

